

Connecting FoxESS devices

Obtaining a FoxESS API Key


To connect your FoxESS system to Smug, you need follow these steps to generate and use an API key from your FoxESS account.

Step 1:

Log into your [FoxESS](#) account.

Step 2:

Once logged in, navigate to your **User Profile > API Management**.

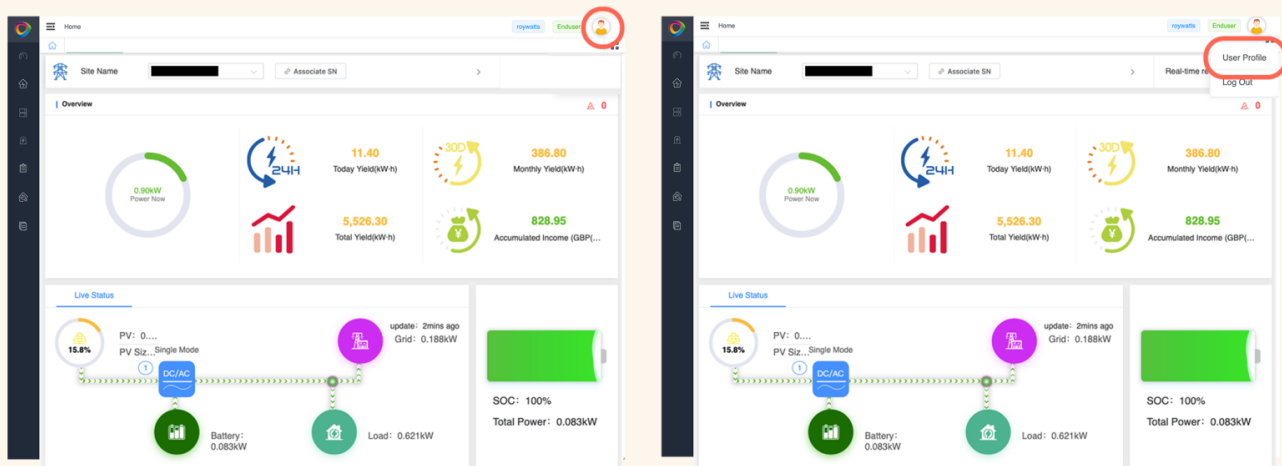

The figure consists of two side-by-side screenshots of the FoxESS API Management page. Both screenshots show the 'API Management' page with the 'Generate API key' button highlighted.

API key: 5112a6d*****b10223d

Generate API key

API documentation

Instructions for use: Please note that after you generate your private API key, we will not display it entirely anymore. To protect the security of your account, do not share your API key with others or publicly change the key in any situation.

Number of calls per day: 1440

Remaining calls for today: 688

Step 3:

Click on "**Generate API Key**".

Enter a name for the key (this can be anything - such as 'Smug', 'your name' etc.)

Enter your property address.

Tick both boxes to allow:


- ☐ Data access
- ☐ Device control

⚠ Save the API Key.

Once the key is generated, copy and store it somewhere safe. FoxESS does not show the full key again after this step.

⚠ If the key is lost, it cannot be recovered. You'll need to delete it and generate a new one.

Paste the API Key in the Smug app.

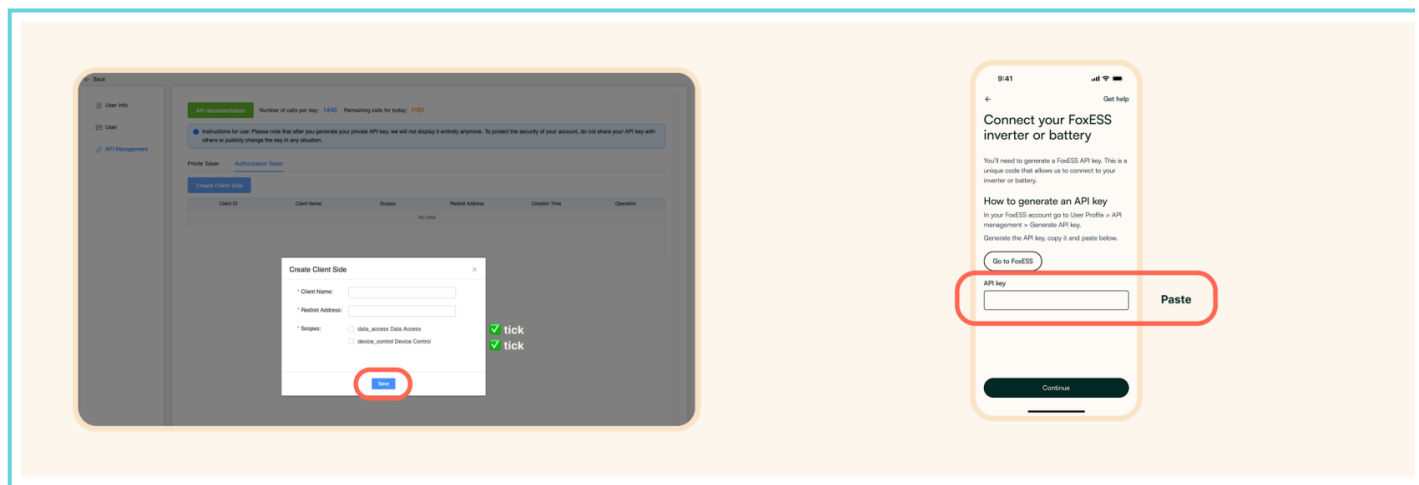

Revision #3

Created 20 March 2025 10:34:48 by Krisztian Hunter

Updated 27 March 2025 15:43:11 by Krisztian Hunter